



Anleitung zur Installation des Sicherheitskabels

Instructions for installing the safety cable

06/2024

SPIETH Gymnastics GmbH

In den Weiden 13 • 73776 Altbach
Tel.: +49 (0) 7153 / 503 28 - 00 • Fax: +49 (0) 7153 / 503 28 - 11
info@spieth-gymnastics.com • www.spieth-gymnastics.com

Official Partner:



REACH THE MAXIMUM.

Installation guide


Please read these instructions before installing the cable.



ATTENTION!

We recommend carrying out the installation with at least 4 people. Always pay attention to your safety and the safety of everyone involved.

1. Release all tension evenly.
2. Stabilize the appliance with several people (4 people) while holding the tensioning cable.
3. Remove the TCS and hook in the safety cable.
Check that the eyebolts on the TCS are tight.
If the eyebolts can be moved, please contact us.
In this case, the TCS device must no longer be used.
4. If the screws are tight, hook the TCS device back into the bracing in front of the safety cable.
Close the quick links and tension the device properly again.
5. The device is now ready for use again.

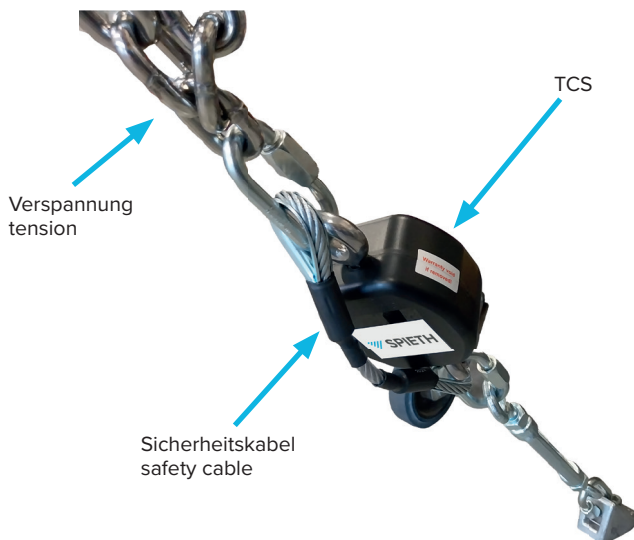

Installationsanleitung

Bitte lesen Sie diese Anweisung, bevor Sie das Kabel installieren.



ACHTUNG!

Wir empfehlen die Installation mit mindestens 4 Personen durchzuführen. Achten Sie stets auf Ihre Sicherheit und die Sicherheit aller Beteiligten.

1. Alle Verspannungen gleichmäßig lösen.
2. Das Gerät mit mehreren Personen (4 Personen) stabilisieren und dabei das Spannkabel festhalten.
3. TCS entfernen und Sicherheitskabel einhängen.
Überprüfen Sie den festen Sitz der Ringschrauben am TCS.
Wenn sich die Ringschrauben bewegen lassen, setzen Sie sich mit uns in Verbindung.
In diesem Fall darf das TCS-Gerät nicht weiter verwendet werden.
4. Wenn die Schrauben fest sitzen, das TCS Gerät vor dem Sicherheitskabel wieder in die Verspannung einhängen.
Schließen Sie die Kettenglieder und spannen Sie das Gerät wieder ordnungsgemäß ab.
5. Das Gerät ist nun wieder einsatzbereit.

